



TOROIDAL TRANSFORMERS

Serbia, Belgrade, 43a Južni Bulevar Street
 Tel/Fax: 2444 9 104, 344 00 72
 +381 11 344 01 95, 344 17 51
 E-mail: office@trafco.rs
 Website: www.trafco.rs


Soft Start Instruction Manual

Thank you for purchasing our product. **BEFORE USE AND INSTALLATION, MAKE SURE YOU READ** the following:


Mounting, attaching and putting into operation must be performed by a competent authorized person because life threatening voltages are involved!

Device Description

“**Soft Start**” device is used for limiting high short-lasting inrush currents at the moment of attaching the transformer to the electrical network. It is recommended for transformers with the powers ranging from 300-3000VA and the primary voltage of 230V. The device has to be installed in a suitable housing. **The warranty period is 12 months from the date of receipt.**

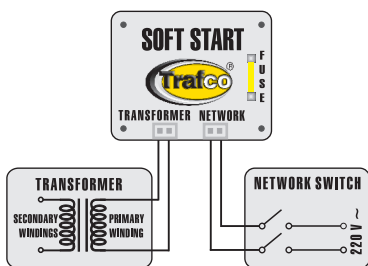

Wiring diagram

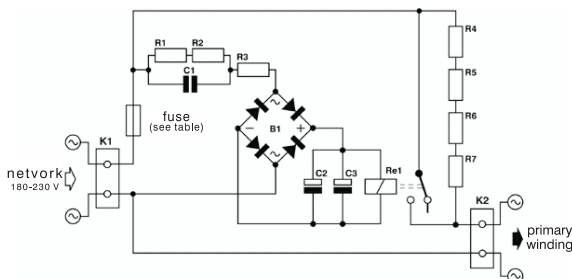

Electrical diagram

Table for the selection of fuses at 230V in the primary winding

Power (VA)	Fuse slow-blow (A) slow	Power (VA)	Fuse slow-blow (A) slow
300	1,6	1200	6,3
400	2	1500	10
500	3,15	1800	10
600	3,15	2000	10
800	4	2500	13
1000	6,3	3000	15

Permitted Soft Start operating voltage: 180-240 V

For all other information not covered by this instruction manual, we are at your disposal on **workdays and Saturdays from 9 am to 4 pm.**